



The fuse **(1)** protects the socket against overload due to overcurrent. When it responds, a white pin becomes visible under the transparent cap. Pushing the pin will turn the power back on. Possibly the cause of the trip (e.g. the connected device) must be removed.